

ファイル ホーム 共有	表示	v2_9_3#Profiliace_v2_9_5		ат Ш.	×
← → × ↑ <mark> </mark> « TJ	-Group > Profitrace2 > v2_9_5 > ProfiTrace	e_V2_9_5 v	D ProfiTrace_V2	_9_5の検索	p
- n/ w/n 17/197	名前	更新日時	種類	サイズ	
<ul> <li>デスクトップ</li> <li>ダウンロード</li> <li>ドキュメント</li> <li>ビクチャ</li> <li>8mm</li> <li>2016_08_13</li> <li>Jun</li> <li>パスワード</li> <li>ジ Dropbox</li> </ul>	Install Control Contro	2016/08/16 9:29 2007/11/06 10:15 2016/03/23 14:51 2004/04/03 0:16 2016/03/24 15:58 2016/03/24 15:54	ファイル フォルダー セットアップ情報 テキスト ドキュメント アイコン アプリケーション テキスト ドキュメント	1 KB 44 KB 3 KB 1,786 KB 1 KB	
← OneDrive					



rofiTrace 2 setup	Installing ProfiCore Ultra Drivers (Win64)
	PRE-INSTALLING NEW driver: ProfiCoreUltra_device.inf
E Wind	dows tetallyr
	ドイス ソフトウェアをインストールしますか?
	名前: PROCENTEC ユニバーサル シリアル バス コントローラー 単行元: Procentec B.V.
✓ "Pr	rocentec B.V."からのソフトウェアを常に信頼する(A) インストール(I) インストールしない(N)
	買する発行元からのドライバーソフトウェアのみをインストールしてください。安全にインストールできるデバイスソフ
N Km	江が全判断する方法
	AND
	Dual canadrina Tobul canadrina ULTRA







eronnoce z setup		
	ProfiTrace V2.9.5 - InstallAware Wizard — 🗌 🗙	
	Select Program Folder Select the location where you would like to create new shortcuts.	
******	Setup will add program shortcuts to the Program Folder listed below. You may type	
	a new rolden name, or accept the suggested name, click vexit to continue.	
	Program Holder: ProfiTrace V2.9.5	
	Install this application for:	
	Anyone who uses this computer (all users)     Only for me (current user)	
	0,,	
	InstallAware	
	< Back Next > Cancel	
	(Promus	
A CONTRACTOR	TROUBLEHOAT TODIKIT ULTRA	
	DDDDCENTER	A second differ
	PRULENIEL	











	ProfiTra	~ ^									
		ace20	り画面カ	が出てき	ます。Ir	nit Profi	Core U	ltraをク	リックし	ます。	
											-
ofiTrace for ProfiCore Ultra \ Action Filter Trigger	/2.9.5 (c) 2004-2016 Toolbars View Re	PROCENTEC eport Settings	Help								- 0
frace Overview Scope	ware Bar graph To	opology Network	Manager   ProfiCaptai	n							
ad Data Sa	e viewer Setup rec	cord trigger Sta	nt message recording	Stop message recon	ing Set record fab	s Set view filter					
ProfiCore Ultra Close Profi	Core Ultra Auto-de	etect baudrate	Set baudrate	y Wizard	1						
em activity: Live list : 🔀 f	Aessage recording :	Record to file	e: 🔀								
Panel	Vive is	st 🖾 Messages	Messages (with	view filter applied)	Station statistics view	P Data inspection					
	HSA=0 F	Reset selected stati	on Info Panel data:	Diagnostics	Auto-upd	ste Info Panel  ☐ Show	scope image				
	0	0	1	2	3	4	5	6	7	8	9
	10		π	12		14					19
	20	20	21			24	25	26		28	29
	30	30	31	32		34	35	36		38	39
	40	40	41	42	43	44	45	46	47	48	49
	50	50	51		53	59	55	56	57	58	59
	60	60	61	62	63	64	65	66	67	68	69
	70	70				74	75	76		78	/79
	80	80	81	82	83	84	85	86	87	88	89
	90	90	91	92	93	94	95	96	97	98	99
	100	100				104	105	106		108	109
						114	115	116		118	119
	110					124	125	126			

是如	1+ た	トがし	1まで	小时	明がかす	いします					
耳又们们	1440	T //	σ	ッ し 町 川	=]/J·/J·/		0				
ProfiTrace for ProfiCore Ultra V	2.9.5 (c) 2004-2016	PROCENTEC									- 0
File Action Filter Trigger Ti	oolbars View R	leport Settings	Help	ul.							
Load Data Save Data File	vare   bargraph   i viewer   Seturine	opology   Network	Manager   monuapka	n     Stan mercare rerr	sting Set second fill	er   Set view filter					
Init ProfiCore Lilitra	contra di tordi	etect haudrate	Set haudrate	v V/m							
Sustem activity: Live list: X M	lessage recording :	× Record to f	le: X								
Info Panel	👻 Live li	ist 🖸 Messages	🐨 📩 🗠	n view filter applied)	Station statistics view	Data inspection	1				
	HSA=0	Reset selected stat	ion   Info Panel data	Diagnostics	▼	ate Info Panel 🥅 Sho	v scope image				
		0	1	2	3	4	5	6	7	8	9
	0	0						6		8	9
	10					14	15	16		18	19
	20	20		Process statu	is info		25	26		28	29
	30	30					35	36		38	39
	40	40	-41		Please wa	à.	45	46	- 67	48	49
	50	50			Initialising ProfiCi	ne Ultra	55	56	57	58	59
	60	60	61				65	66	67	68	69
	70	70					/75	76		78	79
	80	80	81	82	83	84	85	86	.87	88	89
	90	90	91	92	93	94	95	96	97	98	99
	100	100				104	105	106		108	109
	110					114		116		118	119
	120	120				124	125	126			
					<u>.</u>	· · · · · · · · · · · · · · · · · · ·					
				2							

	シン	ステノ	うの	Live	Listの画	面がでて	きます	<sup>-</sup> 。アナラ	ライザー	ーがスタ	ィートしき	ました。	
ProfiTrace for le Action	or ProfiCore U Filter Trigge	Itra V2.9.5 (c) 2 er Toolbars	004-2016 View B	PROCENTEC I eport Settin	ProfiCore Ser.Nr: xxxxx05 as Help	066							- 0
rofiTrace	Overview S	copeWare Bar	r graph   T	opology Netw	ork Manager   ProfiCaptair	1							
Load Data	Save Data	File viewer	Setup re	cord trigger	Start message recording	Stop message recording	Set record filter	Set view filter					
Init ProfiCore I	Ultra Close	ProfiCore Ultra	Auto-d	etect baudrate	Set baudrate 1.5 M	bps 💌 Wizard							
iystem activity.	: Live list : 🤦	Message re	cording :	X Record	to file : 🔀								
nto Panel		1	Y Live li	st 💽 Messa	ges 🛛 👻 Messages (with	view filter applied)	ion statistics view	Data inspection					
			HSA=126	Reset selecte	ad station Info Panel dat	a Diagnostics	- E Auto-upo	tate Info Panel   Shi	ow scope image				
				0	1	2	3	4	5	6	7	8	9
			10		1	12	12	14		10	17		10
			20	20	21	20	23	24	26	76		28	29
		4	30	30	31	30	33	34	35	36		38	
		8	40	40	41	10	43	44	45	46	47	dR.	49
			50	50	51	52	53	54	55	56		58	
			60	60	61	62	63	64	65	66	67	68	69
			70	70	- 71	72	/73	74	75	76		78	79
		3	80	80	81	82	83	84	85	86	87	88	89
			90	90	91	92	93	94	95	96	97	98	99
			100	100	101	102		104	105	106		108	109
		1	110		111	112	113	114		116		118	119
			120					124	125	126			
		1											-